

## Assembly Instructions Sword pen kit

required material:

BU3010 Bushings,


DB3/8 drill

PM013 pen mill

Place the filling in A and turn B onto A.

Press C into the top of the Tube up to the thread. Place D onto C and then turn E onto C.

Now slide the tube over B up to A.

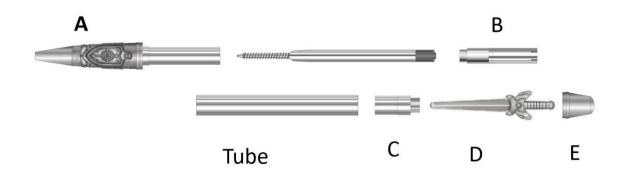

Slide the refill into the pen and turn the twist mechanisme B to part A. Now slide the upper part of the pen over the twist mechanisme